

RFKP - Front Kick Panel

Tools Needed For Installation

Drill with 1/4" Drill Bit
7/16 Open End Wrench
5/32 Allen Wrench
Wire Crimpers / Strippers

Installation Instructions:



Align the kick Panel where you want it mounted and mark the holes (the back of this can be used as recommended hole locations)




After marking the holes, drill the mounting holes using the 1/4" bit



After drilling the mounting holes drill a hole for the speaker wire where the 2 panels meet using the 1/4" drill bit



Once all the holes are drilled mount the kickpanel using the supplied hardware

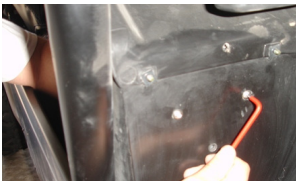

After securing the allen bolts with the 7/16 nuts run your speaker wire



After attaching the speaker wires to the speaker install the speaker into the SSV Works kick panel

