

# **RRKP - Rear Kick Panel**

## **Tools Needed For Installation**

Drill with 1/4" Drill Bit  
10mm Open End Wrench  
5/32 Allen Wrench  
Wire Crimpers / Strippers

## **Installation Instructions:**




After you remove the factory tie down you will re-use the factory hardware to install the rear kick panel



Line up the kick panel in the corner of the bed flush with the top



While holding it secure drill the mounting holes from the outside using 1/4" drill bit through the factory locations

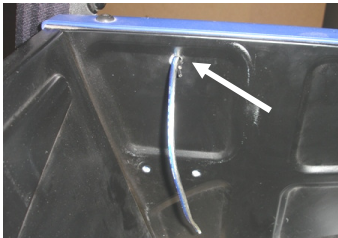

After drilling the mounting holes drill a hole for the speaker wire



Once all the holes are drilled mount the kick panel using the factory hardware and run your speaker wire into the kickpanel



After attaching the speaker wires to the speaker install the speaker into the SSV Works kick panel

