



SSV WORKS, 201 N. Rice Ave Unit A, Oxnard, CA 93030
www.SSVworks.com | Phone: 818-991-1778 | Fax: 866-293-6751

WP-RZ304

2 Seat RZR XP1000 & 2015+ RZR900 4 Speaker Overhead WP System

WARRANTY INFORMATION:

All SSV Works enclosures are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. All SSV Works Speakers are covered by a limited 1 year warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. Contact SSV Works for further warranty information.



Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

TOOLS NEEDED FOR INSTALLATION

- Wire Crimpers
- Wire Strippers
- 13mm Wrench for Battery Terminal
- #3 Phillips Screwdriver

PARTS LIST

- | | |
|--------------------------|---------------------------|
| 1. WP-RZ304 x 1 | 5. Fuse Holder with Fuse |
| 2. M6 x 1.0 Screws x 12 | 6. Crimp on ring terminal |
| 3. M6 Washers x 12 | 7. Zip Ties |
| 4. Mounting Brackets x 2 | |

PARTS LIST IMAGES



1. WP-RZ304



2. M6 x 1.0 Screws x 12



3. M6 Washers x 12



4. Mounting Brackets x 2



5. Fuse Holder with Fuse



9. Crimp on ring terminal



10. Zip ties

INSTALLATION NOTES


To make wiring easier, locate the battery in the vehicle before beginning the installation. The use of a thread locker is recommended on all screws to prevent loosening due to vibration.



A. With one person on either side of the vehicle place the WP-RZ304 into location from the underside of the cage.



B. While holding the enclosure securely toward the front crossbar of the cage, loosely install the 2 brackets using the screws provided.

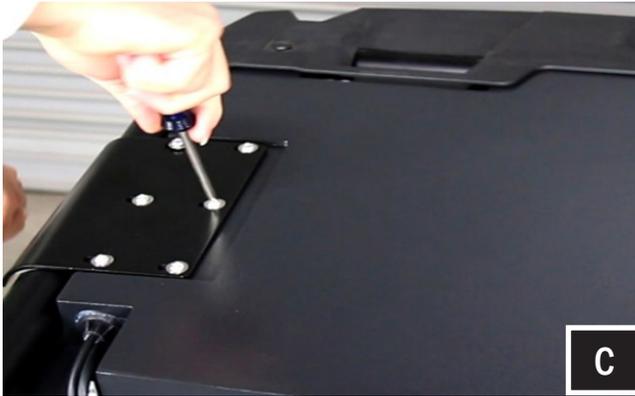


C. Once the enclosure is in position, press the bracket toward the center of the vehicle and tighten the brackets using the #3 screwdriver. NOTE: After all brackets are tightened, it may be necessary to go back and re-adjust the brackets to ensure the enclosure is properly secured.




D. Using the zip ties provided, route the Power/Ground loom to the battery location away from any moving parts or sharp metal. NOTE: The 4 pin short cable is for additional speakers (WP-RZ30+2) and the 4 pin long cable is for adding an SSV Works Powered Subwoofer (Part# WP-RZ3GBS10 or WP-RZ3BSS10)


WIRING INSTRUCTIONS

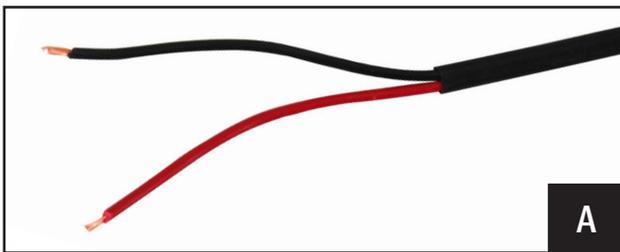

A. Cut the power/ground cable to length; be sure to leave enough wire at the battery location to wire to the battery, strip back approximately 4 inches of the black tubing to expose the red/black wires inside. Strip back 1/4"-1/2" of wire to make your connections.

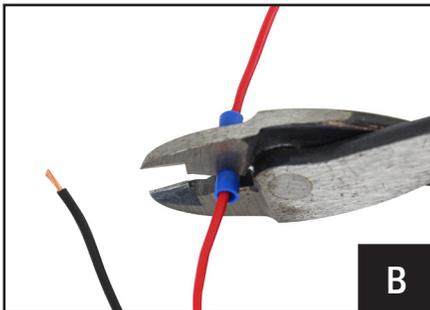

B. Crimp the supplied fuse holder onto the end of the RED wire and attach to the battery "+" terminal.

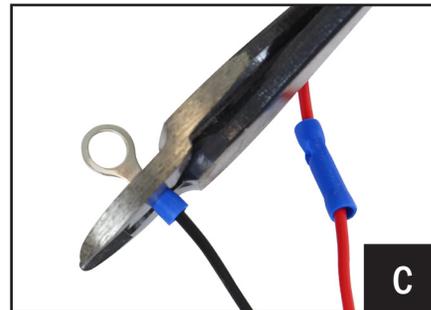

C. Crimp the supplied ring terminal to the BLACK wire and attach to the battery "-" terminal.