



SSV WORKS, 201 N. Rice Ave Unit A, Oxnard, CA 93030
 www.SSVworks.com | Phone: 818-991-1778 | Fax: 866-293-6751

WP3-CM04A

Can-am Commander & Maverick
 4 Speaker Overhead

WARRANTY INFORMATION:

All SSV Works enclosures are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. All SSV Works Speakers are covered by a limited 1 year warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. Contact SSV Works for further warranty information.



Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

TOOLS NEEDED FOR INSTALLATION

- Wire Crimpers
- Wrench for Battery Terminal
- Wire Strippers
- #3 Phillips Screwdriver

PARTS LIST

- | | |
|--------------------------|------------------------------------|
| 1. WP3-CM04A x 1 | 5. Fuse Holder with Fuse |
| 2. M6 x 1.0 Screws x 16 | 6. Crimp on ring terminal |
| 3. M6 Washers x 16 | 7. Extension Power Wire & Zip Ties |
| 4. Mounting Brackets x 4 | |

PARTS LIST IMAGES

1. WP3-CM04A	2. M6 x 1.0 Screws x 16	3. M6 Washers x 16	
4. Mounting Brackets x 4	5. Fuse Holder with Fuse	6. Crimp on ring terminal	7. Extension Power Wire & Zip Ties

INSTALLATION NOTES

Locate the battery in the vehicle before beginning the installation. Depending on the vehicle model and trim level the battery could be located either under dash to the left of the steering wheel, under the rear passenger seat or under the center of the bed. It is recommended to have another person assist with this installation. The use of a thread locker is recommended on all screws to prevent loosening due to vibration.

INSTALLATION INSTRUCTIONS



A. With one person on either side of the vehicle place the WP3-CM04A into location from the underside of the cage.




B. While holding the enclosure securely toward the front crossbar of the cage, loosely install the 4 brackets using the screws provided.




C. Once the enclosure is centered side to side, press the bracket toward the center of the vehicle and tighten the brackets using the #3 screwdriver.

NOTE: After all brackets are tightened, it may be necessary to go back and re-adjust the brackets to ensure the enclosure is properly secured.

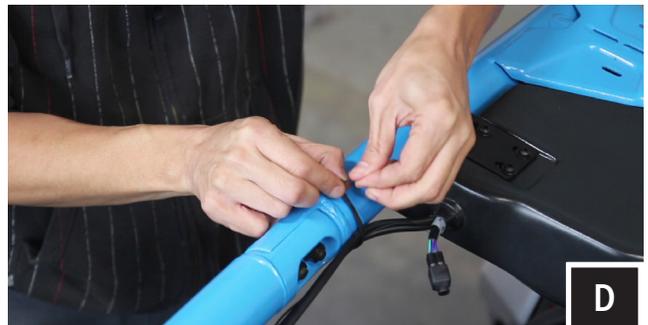


D. Using the zip ties provided, route the Power/Ground loom to the battery location away from any moving parts or sharp metal. NOTE: The 4 pin short cable is for additional speakers and the 4 pin long cable is for adding an SSV Works Powered Subwoofer (Part# WP-CMS10)

WIRING INSTRUCTIONS

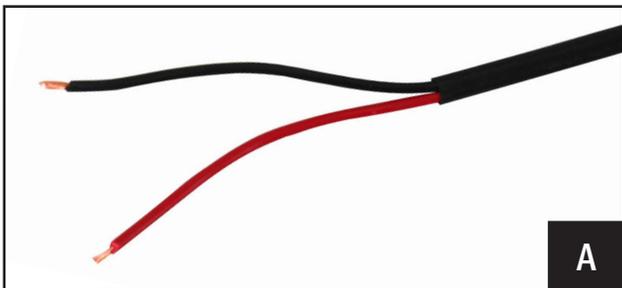

A. Use the supplied extension power wire to complete your run from the WP3-CM04A to your battery. Strip back 1/4"-1/2" of wire to make your connections.

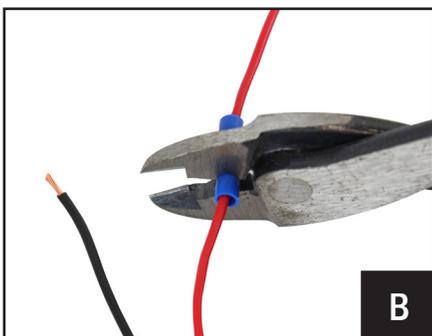

B. Crimp the supplied fuse holder onto the end of the RED wire and attach to the battery "+" terminal.



C. Crimp the supplied ring terminal to the BLACK wire and attach to the battery "-" terminal.



WP3-CM04A